




Bendix Magneto Rough Coil Replacement

Steps to remove the rough coil.

Written By: Kelsi English

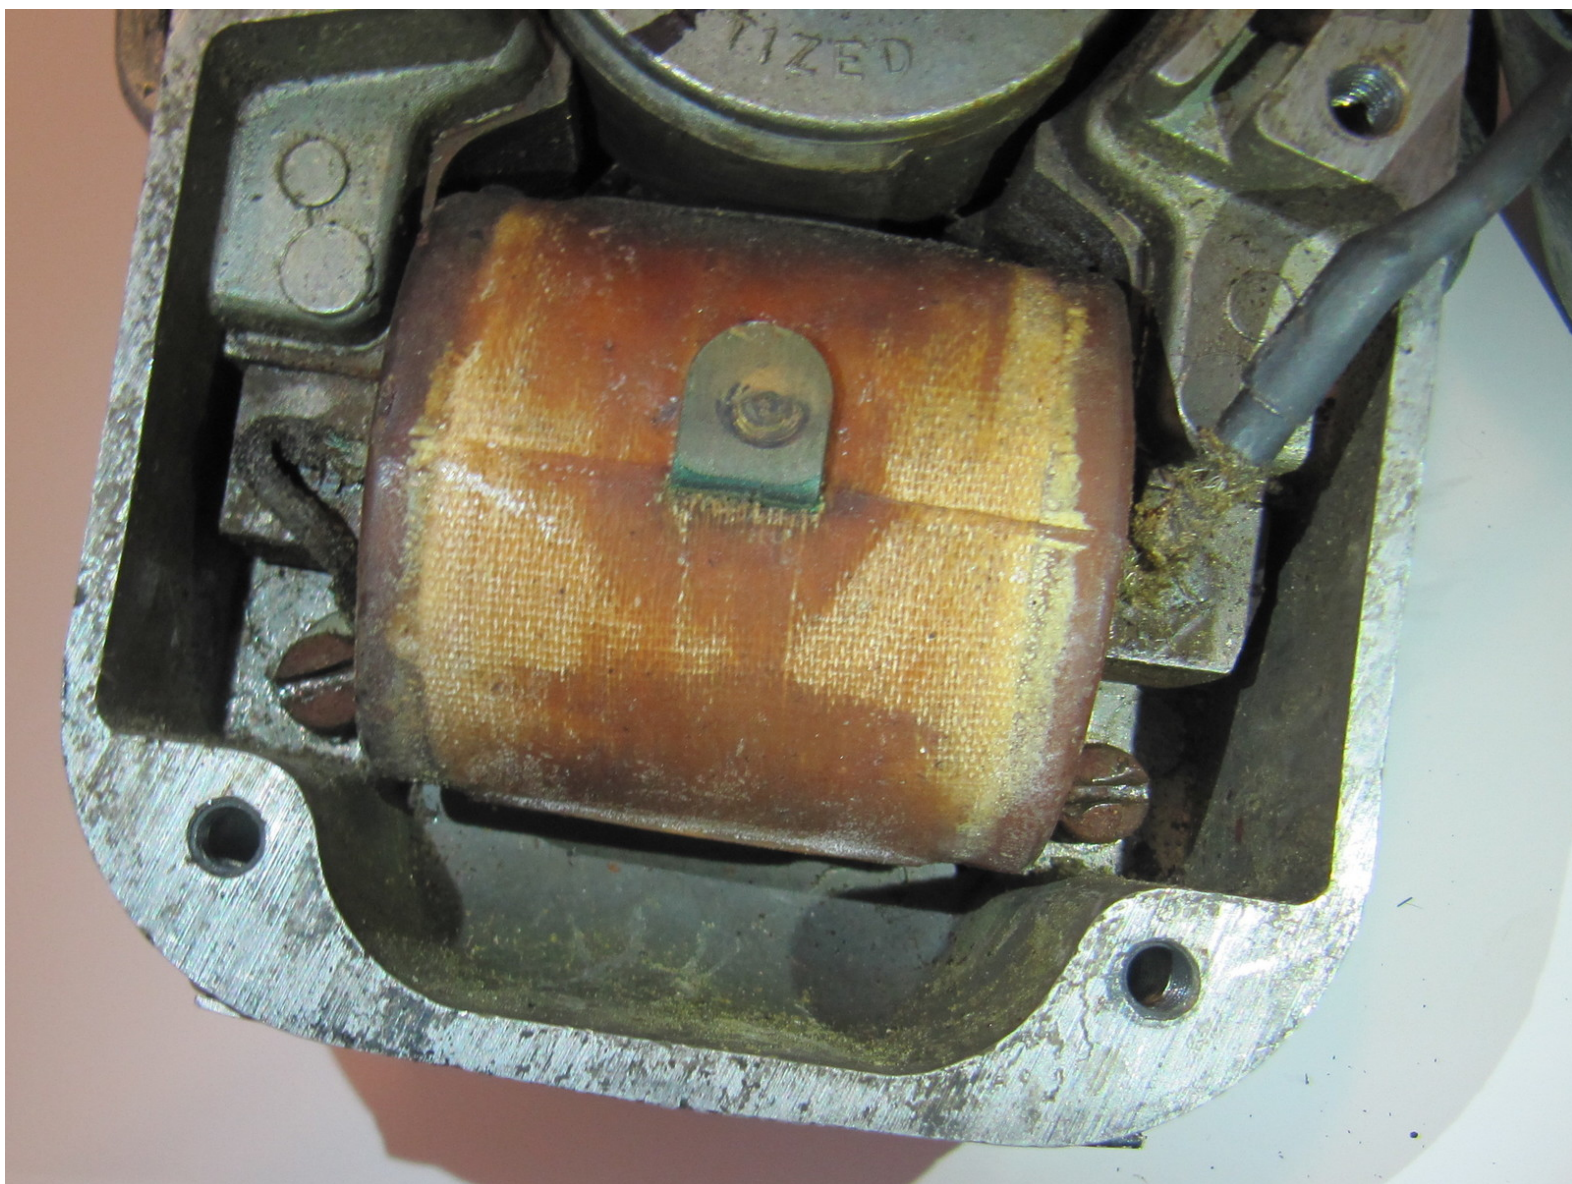

INTRODUCTION

This guide will show you how to remove the rough coil of the magneto. A bad rough coil can cause the aircraft engine to run poorly and shake.




TOOLS:

- [Flathead Screwdriver](#) (1)


Size #2

Step 1 — Rough coil

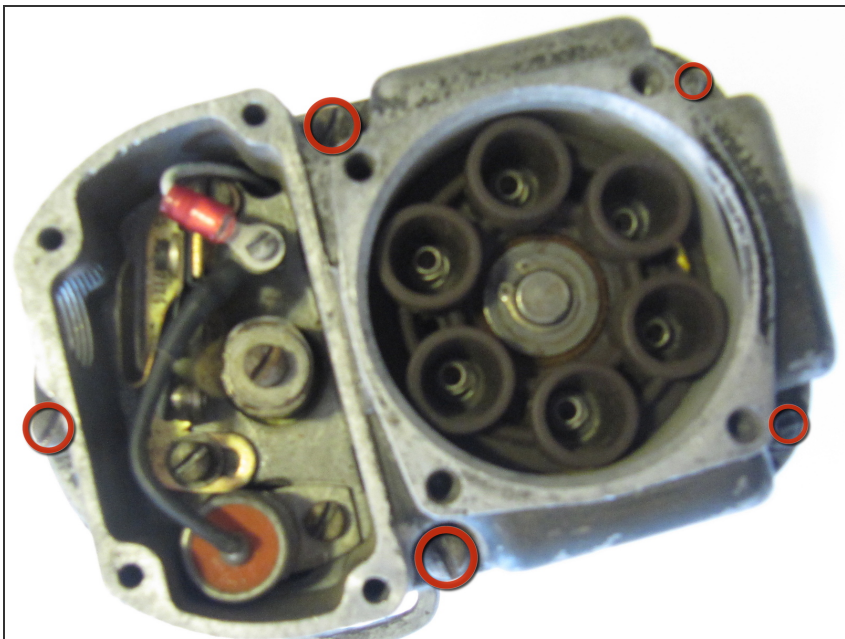

- Use a #2 Flathead screw driver to remove the five screws on the body of the magneto.

Step 2

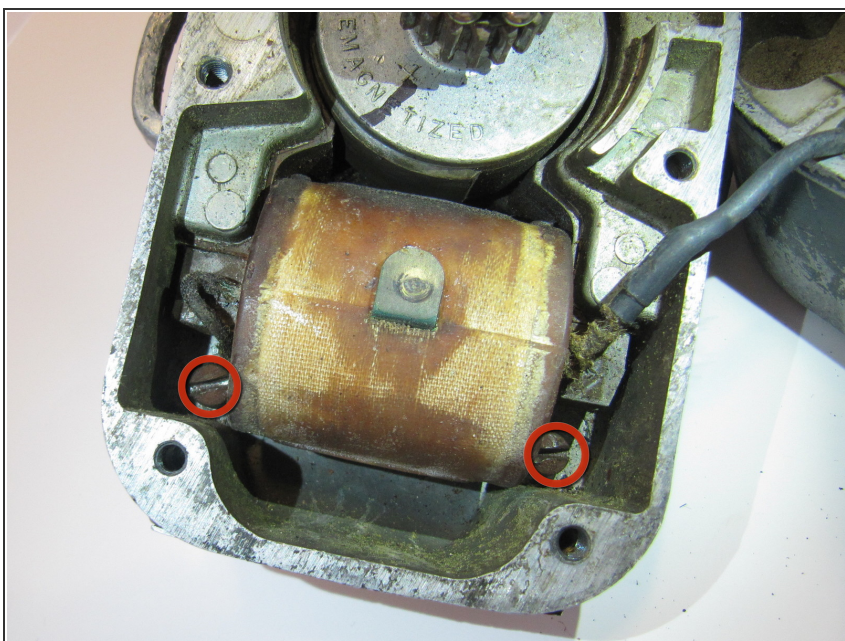

- Locate the two screws, one on the left and one on the right, of the primary circuit.
- Remove the screws using a #2 Flathead screw driver.

Step 3



- Remove the primary circuit and replace it.
- ⓘ The super coil may seem as though it does not come out but it does, it can just be a little jammed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:21:34 AM.